

ETOG – Ground Sensor

Can the ETOG Sensor Lead be Extended?

Extend the ETOG Sensor Lead

Yes, you can extend the sensor lead up to 200 meters using same gauge cable.

The total resistance of the sensor cable must not exceed 10 ohms.

It must be embedded horizontally with the top flush with its surroundings using the installation plate. Additionally, be sure to mount the sensor must on a hard foundation of concrete or asphalt. Lastly, never install the sensor wire parallel to heater cables as electrical interference may distort the sensor signal.

Please refer to the [ETOG Manual](#) and the [ETO2 Manual](#) for more information.



