




RESIBOX-120



COMMBOX-600

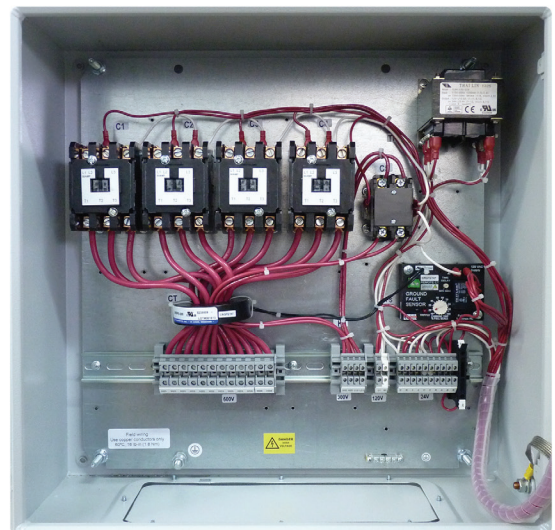

Index	Page
Introduction	2
Installation notes	3
Wiring the Commbox-600	4
Wiring the Resibox-120	8
Connecting snow sensors to the system	10
Operating instructions	11
Turning the system ON and OFF	11
Selecting temperature scale	11
Selecting Automatic or Manual mode	11
Heaters indication	11
Snow flake icon and digital time indication	11
Technician settings	12
Enter technician settings mode	12
P01 - Temperature set point	12
P02 - Lower limit temperature for heating	13
P03 - Upper limit temperature for heating	13
P04 - Time delay before stopping the heaters	14
P05 - Manual mode ON time	14
P06 - Heaters cycle and splitting time	14
P07 - Heater outputs logic by AirSense or by 3 <sup>rd</sup> party sensor	15
P08 - Snow sensor sensitivity	16
P88 - Snow detection threshold	16
P09 - Number of snow sensors connected	16
P10 - Test conditions mode	16
Save changes and return to normal display	16
Restore default values	17
Enable/Disable zones	17
DIP Switch settings	17
DIP switch S2 - Short measuring times (test only)	17
DIP switches S3 and S4 - heaters sequencing logic	18
Temperature reading errors	19
Ambient temperature sensor readings out of range	19
Communication error with one or more snow sensors	19
Upper limit temperature sensor is not connected or short circuit	19
Appendix 1 - Calibrating and testing the internal GFCI	20
Upper Limit Temperature Sensor	21
Electric Diagram - Connection to the box system	22

The power boxes together with the controller and interface panel, offer smart and easy control over the Snow & Ice Melting system.

It can operate up to 4 snow melting zones and one auxiliary zone, with selectable sequencing method. Typical applications include driveways, sidewalks, loading docks, stairs, pavements and gutters.

The backlit LCD screen provides full interface and information of the system status.


The use of several zones staggering allow covering larger area for snow melting with a limited available electrical power.

The controller offers various operating and programming options such as:

- Switchable temperature scales (°F or °C)
- Both Automatic and Manual modes
- Adjustable heaters cycle and splitting times
- Adjustable heaters hold on, off & delay
- Adjustable snow sensor sensitivity (%Rh)
- Optional auxiliary control by 3rd party snow sensor (e.g. Gutter sensor)
- Commissioning/Test mode
- Energy saving upper temperature limit
- Adjustable Lower ambient temperature limit to stop heaters (lockout)



### General System Layout with Resibox-120 and Commbbox-600

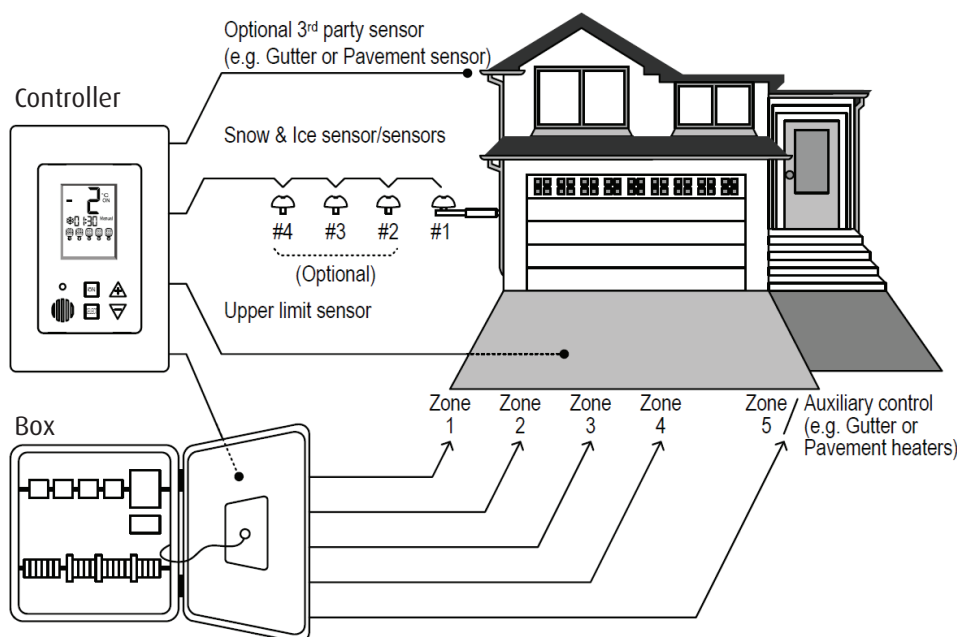

**PLEASE READ THIS MANUAL AND THE SAFETY WARNINGS CAREFULLY BEFORE  
INSTALLING AND USING THE CONTROLLER AND SAVE IT FOR FUTURE USE**

### INSTALLATION NOTES

- Familiarize yourself with the markings, warnings, components and terminology.
- The power boxes and its accessories must be installed by a qualified electrician in accordance with local regulations and the requirements of the NEC (NFPA 72 ) and the CEC part 1.
- **WARNING: Ensure the power is disconnect from all circuits before mounting the power box and making any connections. Contact with components carrying hazardous voltage can cause electric shock and may result in severe personal injury or death.**
- **Installer must ensure the installation of approved disconnect means, for all power supply circuits feeding this unit.**
- The power boxes are suitable for indoor wall mount installation only.
- Ensure wiring according to the provided schematics using copper conductors only.
- Make sure the wire gauge (AWG) is suitable for the circuit amperage draw, as specified in the NEC/CEC table 1.
- Ensure that the main breakers (fuses) are suitable for the heating systems rating (80% load).
- Grounding means must comply with local regulations and CEC/NEC.
- Ensure that the heating system/de-icing system connected to this unit complies with the UL 499 or UL 515 & CSA 22.2 # 130.3 standard and is certified / listed by an NRTL.
- Ensure that all wiring is rated for the application at 60°C (140°F as per UL 515 CSA 22.2 #130 clause 12 table 12.1).
- Ensure that any holes punched for conduit are to compromise the integrity of the enclosure ratings.

### GROUND FAULT CIRCUIT INTERRUPTER (GFCI)

- The ground fault interrupter/residual current detector installed in this system is a Non class A GFCI, intended for equipment protection.
- Familiar yourself with its operation and required setting.
- At installation and commissioning stage use a calibrated milliamp meter to read and record the heating systems natural leakage.
- Set the GFI/RCD to no more than 30 milliamps higher than that reading.
- This step might have to be repeated a few times, to avoid nuisance tripping.
- The GFCI should be tested monthly. Please refer to the calibration and testing instructions in appendix 1 of this manual.



### WIRING THE COMMBOX-600

#### Heater load connection

- Provide 3-Phase contactors C1, C2, C3 and C4 with up to 600 VAC, 50 AMP Maximum per pole.
- Provide contactor C5 with with up to 277 VAC, 30 AMP.
- Make sure the wire gauge (AWG) is suitable for the circuit Amperage draw, as specified in the NEC/CEC table 1.

#### Main supply for the power box

- Provide terminals L1, N1 with 120 VAC supply.


**CAUTION: INCORRECT VOLTAGE MAY CAUSE FIRE OR SERIOUSLY DAMAGE THE UNIT**

#### Connection to 3rd party ice/snow sensor (GIT-1 / CIT-1 / SIT/6E) - option

- 3-wire shielded cable
- Up to 2,000 ft (609 m) using 12 AWG 3-wire shielded cable.
- Up to 500 ft (152 m) using 18 AWG 3-wire shielded cable.


#### Connection to snow sensor AIRSense.

- Please refer AIRSense installation section of this manual.

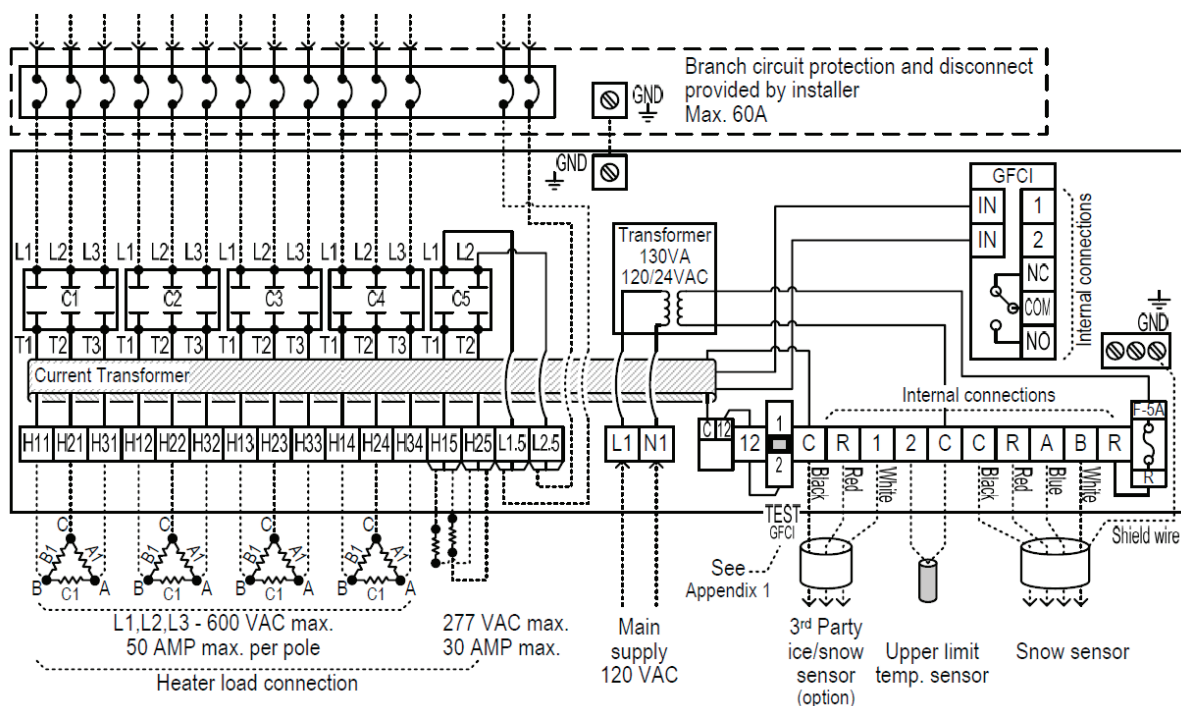


**IMPORTANT:** If the heaters are connected in stars, the neutral must pass through the internal current transformer ring and the external branch circuit protection.

### Option 1: 1 heater per contactors C1, C2, C3, C4 and C5

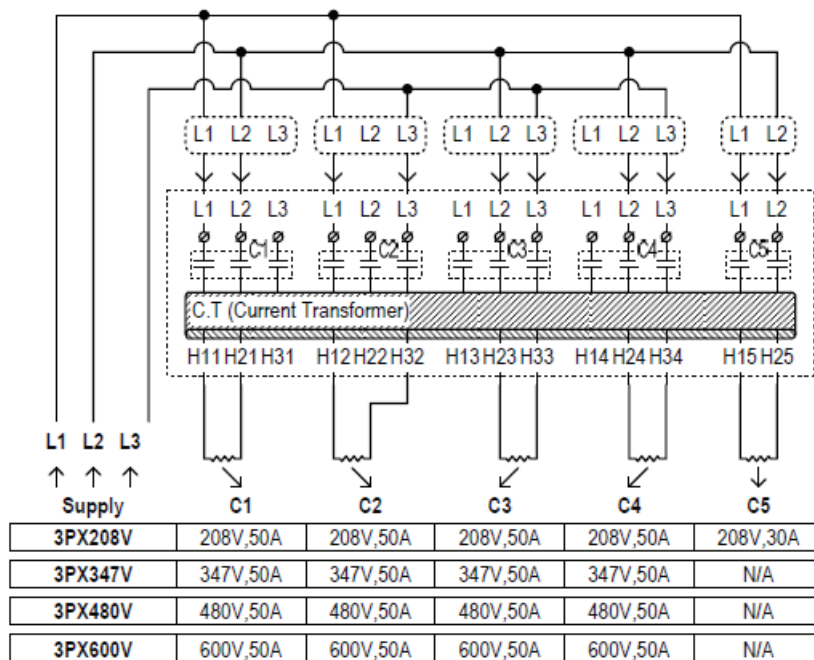


### Option 2: 3 heaters per contactors C1, C2, C3 and C4 (triangle transform) and 1 heater per contactor C5

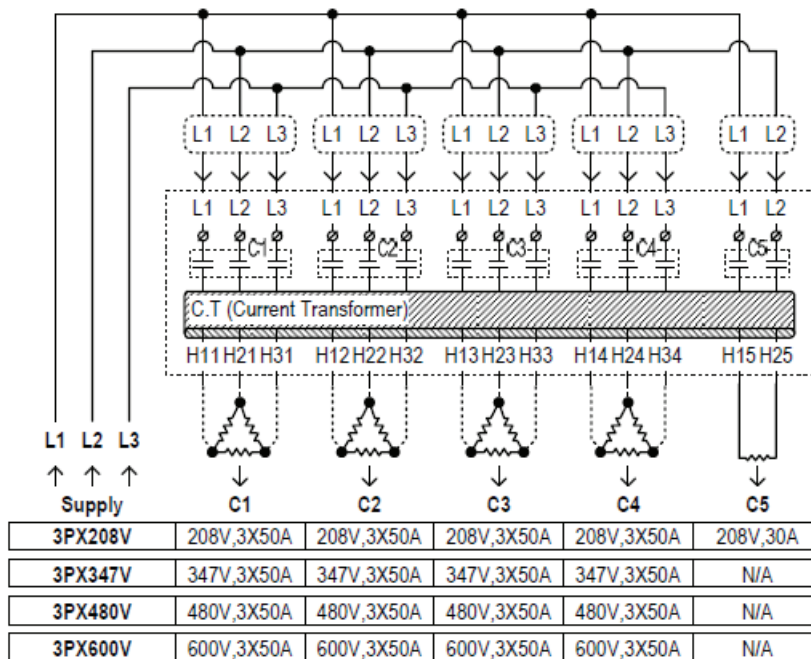


Note: Contactors 1 and 2 can be connected to any combination of 1 or 3 (triangle transform) heaters. Example: Contactor C1 can be connected to 3 heaters (triangle transform) and contactor C2 can be connected to 1 heater.


### Option 1: 1 heater per contactors C1, C2, C3, C4 and C5

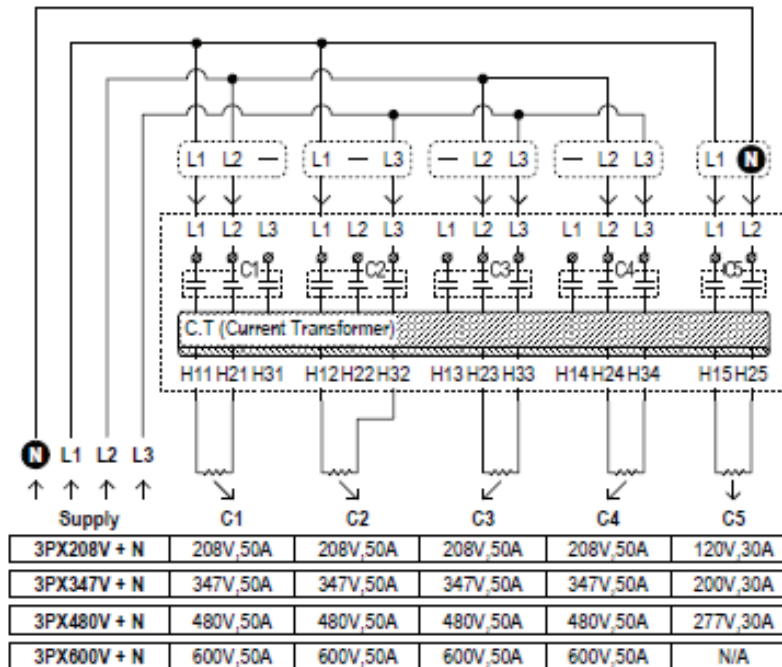

### Option 2: 3 heaters per contactors C1, C2, C3 and C4 (triangle transform) and 1 heater per contactor C5

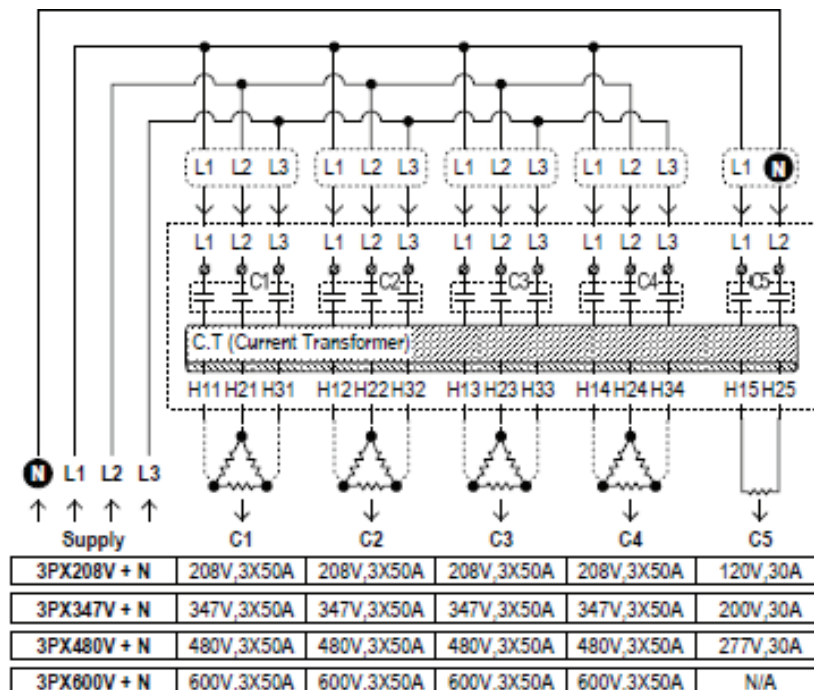

Option 3: 1 heater per contactors C1, C2, C3 and C4 and C5 (Neutral connected to C1, C2, C3, C4 and C5)

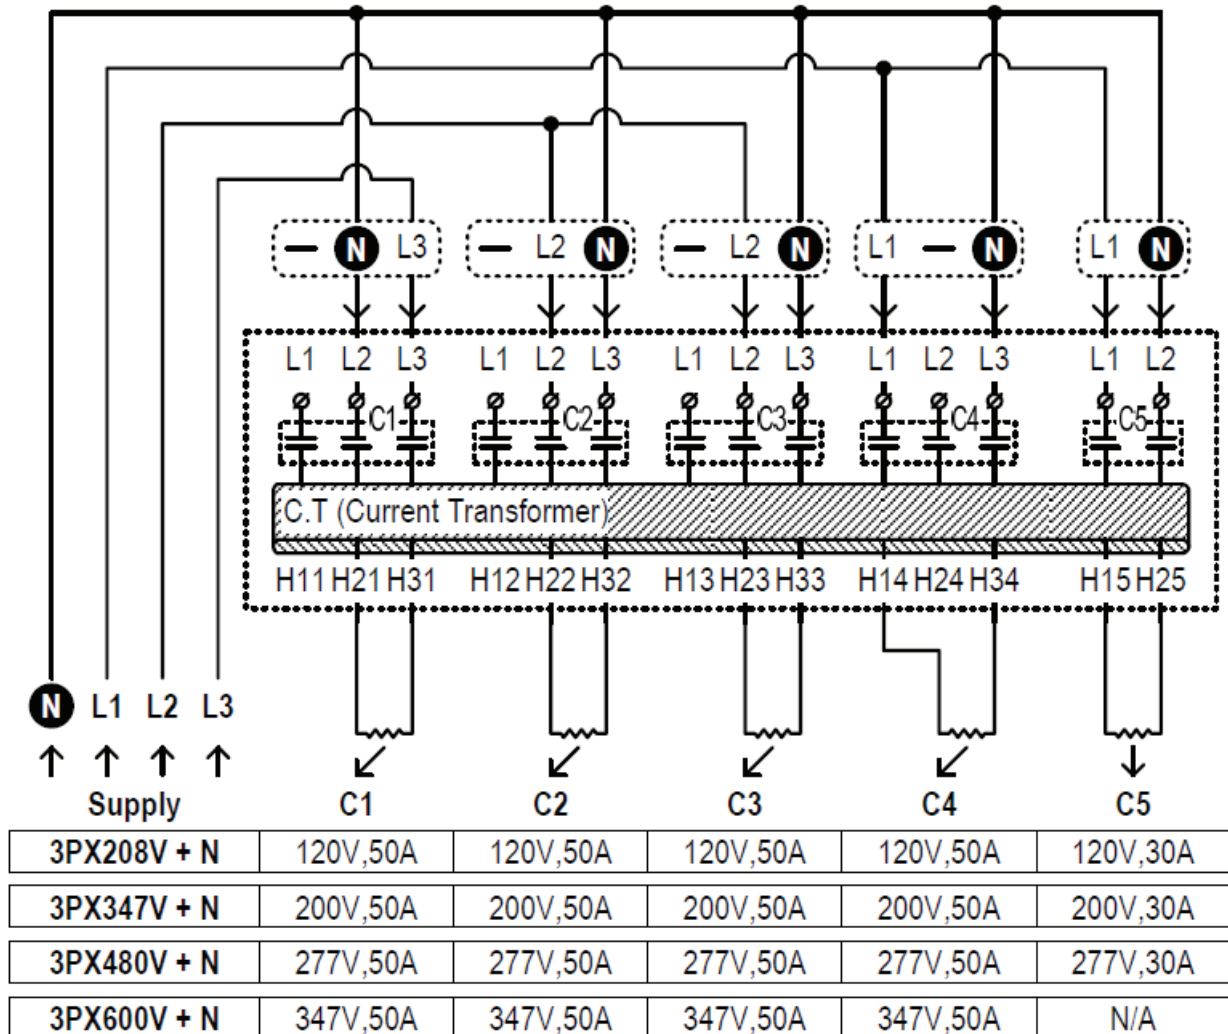

Note: Contactors 1,2,3 and 4 can be connected to any combination of 1 or 3 (triangle transform) heaters with and without Neutral.

Example: Contactor C1,C2 and C3 connected to 3 heaters (triangle transform) and contactor C2 connected to 1 heater.



### WIRING THE RESIBOX-120

#### Heater load connection

- Provide contactors C1, C2, C3 and C4 with up to 277 VAC, 30 AMP.
- Make sure the wire Gauge (AWG) is suitable for the circuit Amperage draw, as specified in the NEC/CEC table 1.

#### Main supply for the power box

- Provide terminals L1, N1 with 120 VAC supply.


**CAUTION: INCORRECT VOLTAGE MAY CAUSE FIRE OR SERIOUSLY DAMAGE THE UNIT**

#### Connection to 3rd party ice/snow sensor (GIT-1 / CIT-1 / SIT/6E) - option

- 3-wire shielded cable
- Up to 2,000 ft (609 m) using 12 AWG 3-wire shielded cable.
- Up to 500 ft (152 m) using 18 AWG 3-wire shielded cable.


#### Connection to snow sensor (AIRSense)

- Please refer AIRSense installation section of this manual.

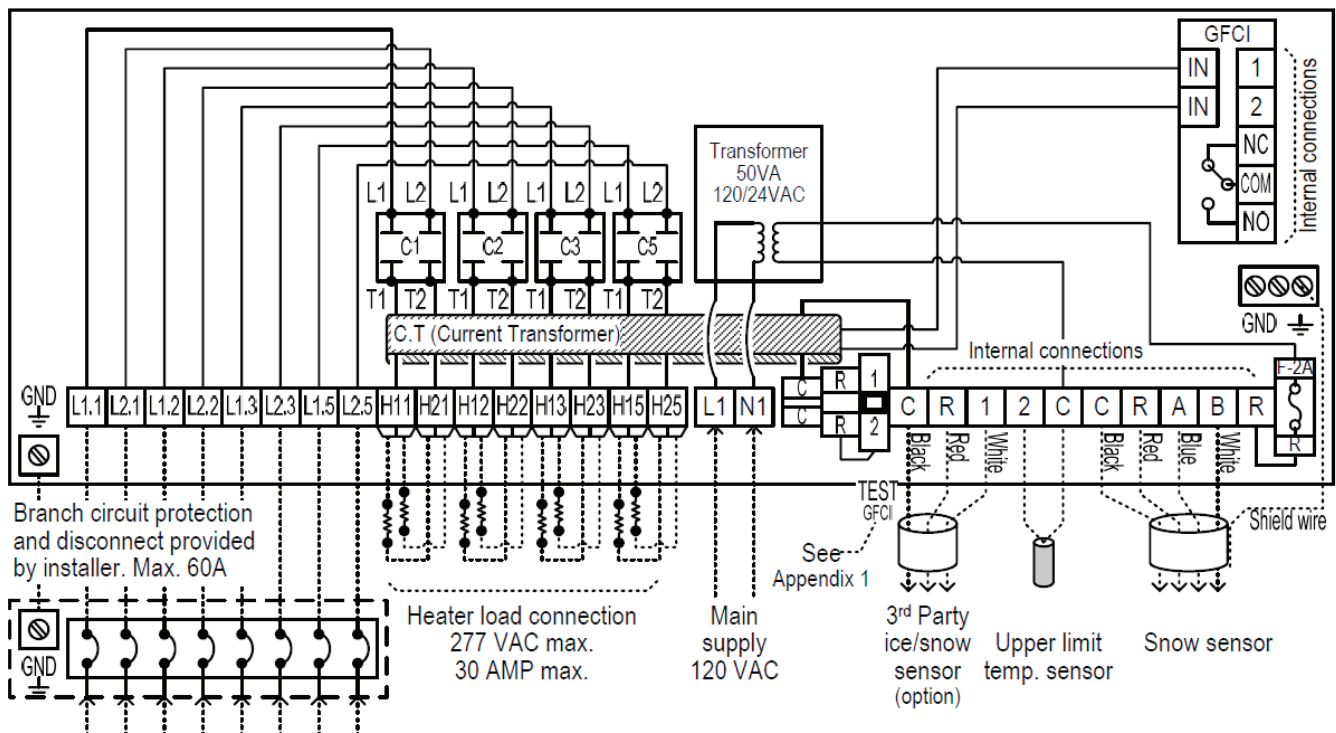

**IMPORTANT:** If the heaters are connected in stars, the neutral must pass through the internal current transformer ring and the external branch circuit protection.

### Option 1

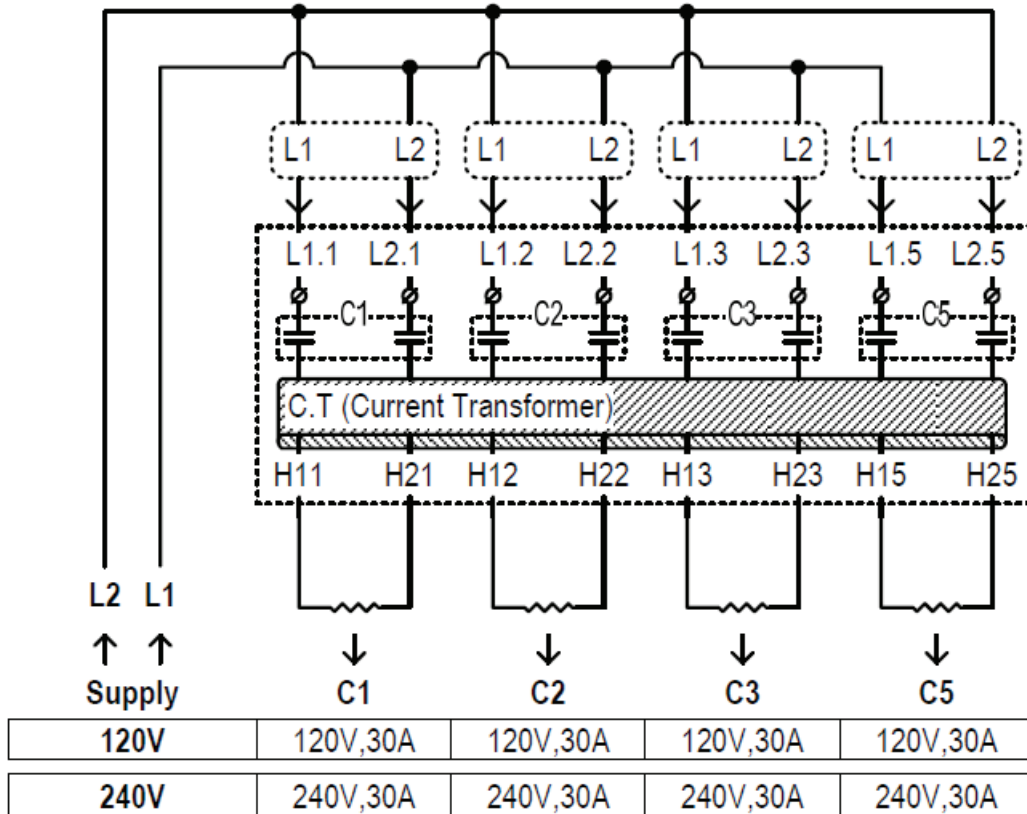


### CONNECTING SNOW SENSORS TO THE SYSTEM

The system can be configured to operate with 1, 2, 3 or 4 snow sensors. Each snow sensors must have different MAC address in order to communicate with the main board. The snow sensors series includes 4 different part numbers, each is factory pre-configured with unique MAC address as follows:

AIRSense1	MAC Address 1	AIRSense2	MAC Address 2
AIRSense3	MAC Address 3	AIRSense4	MAC Address 4

When connecting more than one sensor, snow sensor 1 must be connected last in communication line.

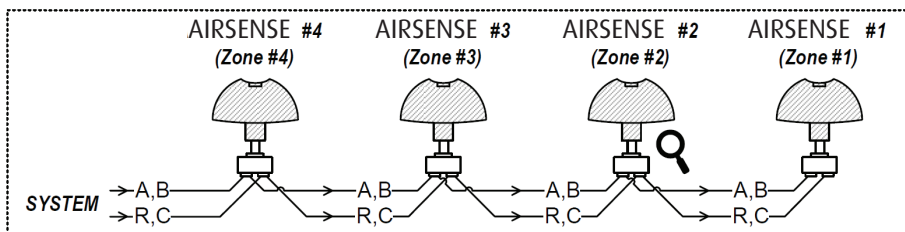

The snow sensors will control zone upon the following logic:

#### Connecting 1 snow sensor

The snow sensor will control all 4 zones (and zone 5 as an option).

#### Connecting 2 snow sensors

Snow sensor 1 will control zones 1 and 2.  
Snow sensor 2 will control zones 3 and 4 (and zone 5 as an option).

#### Connecting 3 snow sensors


Snow sensor 1 will control zone 1.  
Snow sensor 2 will control zone 2.  
Snow sensor 3 will control zones 3 and 4 (and zone 5 as an option).

#### Connecting 4 snow sensors

Snow sensor 1 will control zone 1.  
Snow sensor 2 will control zone 2.  
Snow sensor 3 will control zone 3.  
Snow sensor 4 will control zone 4 (and zone 5 as an option).

#### Notes:

- The number of snow sensors connected must be configured in section P09 of the technician settings.
- When one of the snow sensors cannot be viewed through communication (faulty or not connected), the values on snow sensor 1 will be used instead.

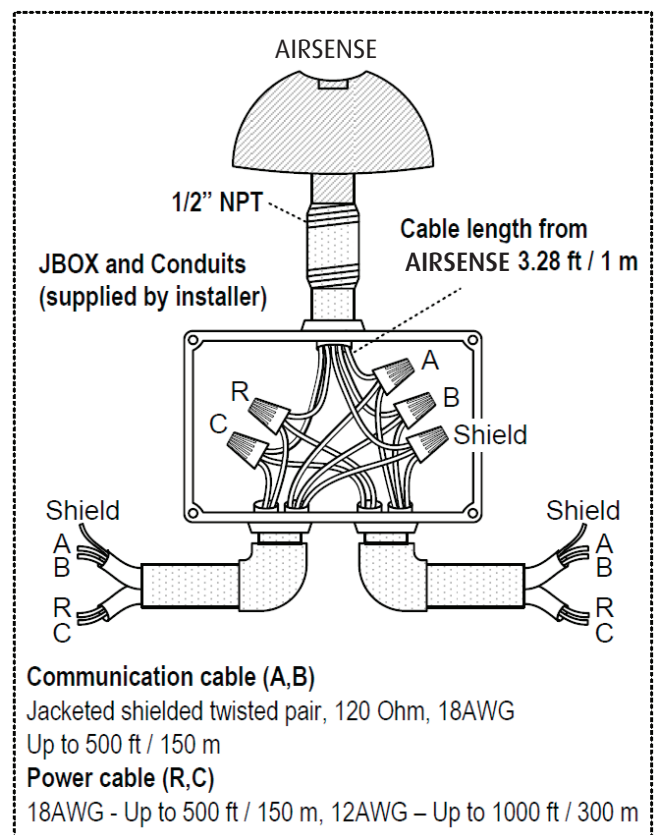

### OPERATING INSTRUCTIONS

#### Green POWER lamp

- The green power lamp will light when power is supplied to the unit (120 VAC).

#### Red GROUND FAULT RESET lamp and button

- The red GROUND FAULT RESET lamp will lit when the internal GFCI is tripped.
- Press and hold the GROUND FAULT RESET button for 5 seconds to reset the unit.


#### Turning the system ON and OFF

- Press and hold the [ON] button for 0.5 seconds to turn the system ON or OFF.
- The words "ON" or "OFF" will appear on display.



#### Selecting temperature scale

- Press the [+] button for Celsius.
- Press the [-] button for Fahrenheit.

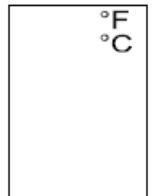

#### Selecting Automatic or Manual mode



- Press the [SELECT] button to switch between modes:

"Automatic"

Heating will start and stop automatically depending on snow detection by the snow sensor/sensors.

"Manual ON"

Heating will start regardless of snow sensor measurements and will stop after a preset time (pls. refer to the "Manual ON" section in the technician settings P05).

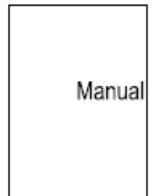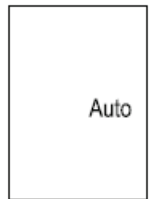

**NOTE:** Mode will always return to "Automatic" after switching the unit OFF and ON.

#### Heaters indication

The number beneath the heater icon indicate the heater stage (1 to 5).



Black icon – Heater ON

White icon – Heater OFF



Heater ON

1



Heater OFF

1

#### Snow flake icon and digital time indication

A solid snow flake icon will appear on display while sensing snow and during normal heaters operation.



A blinking snow flake icon will appear on display during heaters off delay or when manual mode is activated. The digital clock will count down the remaining time until the heaters are turned off. The snow flake icon will disappear from display as long as the heaters are turned off.

### TECHNICIAN SETTINGS


Use the technician settings mode to view and adjust the following parameters:

- P01 Temperature set point
  - P02 Lower ambient temperature limit to stop heaters
  - P03 Energy saving, upper slab temperature limit to stop heaters
  - P04 Time delay before stopping the heaters
  - P05 ON time for manual mode
  - P06 Heaters cycle time / Splitting time
  - P07 Sensors and heaters control logic
  - P08 Snow sensor sensitivity
  - P88 Snow detection threshold
  - P09 Number of snow sensors connected
  - P10 Commissioning / Test mode
- Restore defaults




#### Enter technician settings mode

- Move DIP switch S1 located on the side of thermostat to ON position.
- Press the [SELECT] and [+] buttons simultaneously to move forward to the next technician parameter.
- Press the [SELECT] and [-] buttons simultaneously to return to the previous technician parameter.

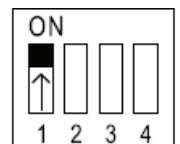

#### Save changes and exit technician settings mode

- Move DIP switch S1 located on the side of thermostat to OFF position.

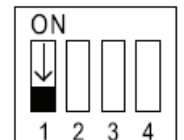


**Important:** Changes made to technician parameters will not take effect as long as DIP switch S1 is in ON position.

#### PARAMETERS:

##### P01 - Temperature set point

- Move DIP switch S1 located on the side of thermostat to ON position to enter technician settings mode.
- "P01" and the temperature set point will appear on display. Use the [+] and [-] buttons to adjust the temperature set point. Range: 19...45°F / -7...+7°C.

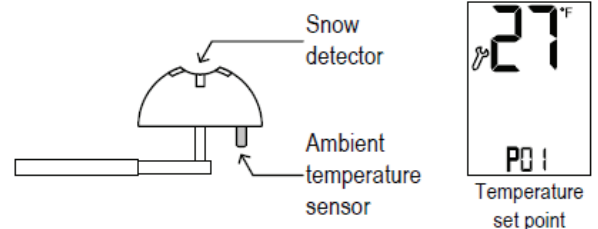



As long as the ambient temperature is lower than the temperature set point P01, the controller will turn ON upon receiving a positive snow signal from the snow detector.



### TECHNICIAN SETTINGS (CONT')



#### P02 - Lower limit temperature for heating

- Press the [SELECT] and [+] buttons simultaneously.
- "P02" and the low limit temperature will appear on display.
- When the temperature on the temperature sensor drops below the low temperature limit, the heating system will stop.
- Use the [+] and [-] buttons to adjust the temperature set point.
- Range: -4...+23°F / -20...-5°C Default: -5°F / -20°C
- Press the [SELECT] and [+] buttons simultaneously again.
- The word "ON" or "OFF" will appear on display.
- Use the [+] and [-] buttons enable (ON) or disable (OFF) the P02 parameter. If disabled, the heating system will operate without low temperature limitations.

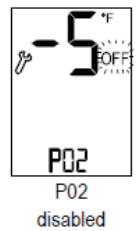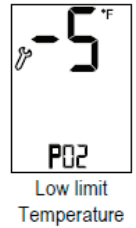

#### P03 – Upper limit temperature for heating

- Press the [SELECT] and [+] buttons simultaneously.
- "P03" and the slab upper limit temperature will appear on display.
- Use the [+] and [-] buttons to adjust the upper limit temperature.
- Range: +41...+86°F / +5...+30°C Default: 86°F / +30°C
- Press the [SELECT] and [+] buttons simultaneously again.
- The word "ON" or "OFF" will appear on display.
- Use the [+] and [-] buttons enable (ON) or disable (OFF) the P03 parameter.
- If disabled, the heaters will work regardless of the upper limit.
- Press the [SELECT] and [+] buttons simultaneously again.
- The display will show the temperature on the upper limit sensor.

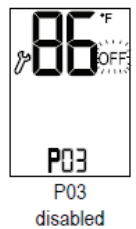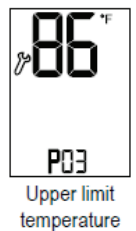


### TECHNICIAN SETTINGS (CONT')

#### P04 -Time delay before stopping the heaters

- Press the [SELECT] and [+] buttons simultaneously.
- "P04", "dL" and the time delay before stopping the heaters (Hold ON) will appear on display. The hours will blink.
- Use the [+] and [-] buttons to adjust the hours of the time delay.
- Range: 00...99 hours     Default: 00 hours
- Press the [SELECT] and [+] buttons simultaneously again.
- The minutes will blink.
- Use the [+] and [-] buttons to adjust the minutes of the time delay.
- Range: 00...59 minutes     Default: 30 minutes

Note 1. The time delay countdown will start when the snow detection signal from snow sensor will switch from positive to negative.

Note 2. The staggering sequence will continue during the time delay period.

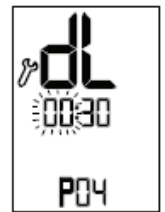

Time delay hours



Time delay minutes

#### P05 - Manual mode ON time

- Press the [SELECT] and [+] buttons simultaneously.
- "P05", "On" and the "Manual ON" mode time period will appear on display. The hours will blink.
- The delay time parameter defines a time frame in which the heaters remain ON after receiving an "Manual ON" command.
- Use the [+] and [-] buttons to adjust the hours of the working time.
- Range: 00...99 hours     Default: 6 hours
- Press the [SELECT] and [+] buttons simultaneously again.
- The minutes will blink.
- Use the [+] and [-] buttons to adjust the minutes of the working time.
- Range: 00...59 minutes     Default: 00 minutes



Manual ON hours



Manual ON minutes

#### P06 – Heaters cycle and splitting time

- Press the [SELECT] and [+] buttons simultaneously.
- "P06", "SP" and the splitting time will appear on display.
- The minutes will blink.
- The heaters cycle / splitting time parameter defines the working time of the heaters when working in sequence.
- Example: the splitting time is set to 10 minutes and 4 heaters work in sequence, each heater will be ON for 2.5 minutes (10/4=2.5).
- Use the [+] and [-] buttons to adjust the splitting time.
- Range: 10...1999 minutes     Default: 24 minutes.




Splitting time

### TECHNICIAN SETTINGS (CONT')

#### P07 - Heaters outputs logic controlled by AIRSense snow melt sensor or by 3rd party sensor

- Press the [SELECT] and [+] buttons simultaneously.
- "P07" and the figures "0", "1", "2" or "3" will appear on display.
- Use the [+] and [-] buttons to define the heaters logic (model dependent) as follows:

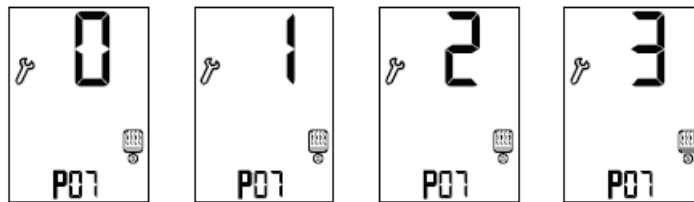

RESIBOX-120  
Outputs 1,2,3 and 5

Value	Outputs controlled by AIRSense	Outputs controlled by 3 <sup>rd</sup> party sensor	Comments
0	All outputs	-	Default
1	1,2,3	5	
2	-	All outputs	The display will not show the ambient temperature and will remain blank.
3	Same as 1		

COMMBOX-600  
Outputs 1,2,3,4 and 5

Value	Outputs controlled by AIRSense	Outputs controlled by 3 <sup>rd</sup> party sensor	Comments
0	All outputs	-	Outputs 4 and 5 will turn ON or OFF together. Default.
1	1,2,3,4	5	
2	-	All outputs	The display will not show the ambient temperature and will remain blank.
3	1,2,3	4,5	Outputs 4 and 5 will turn ON or OFF together.

Note: 3rd party sensors - i.e. gutter or pavement sensors – CIT, GIT, SIT by eti.

### TECHNICIAN SETTINGS (CONT')


#### P08 - Snow sensor sensitivity

- Press the [SELECT] and [+] buttons simultaneously.
- "P08" and the snow sensor sensitivity value will appear on display.
- Use the [+] and [-] buttons to adjust the sensitivity. Range: 20...80 % (20% - Less sensitive, 80% - more sensitive), Default: 50 %




#### P88 - Snow detection threshold

- Press the [SELECT] and [+] buttons simultaneously.
- "P88" and the snow sensor threshold will appear on display.
- Use the [+] and [-] buttons to adjust the threshold.
- Range: 00...60 minutes Default: 5 minutes
- If the threshold is not reached, the logic of turning the heaters either ON or OFF will not be affected by snow detection.
- During countdown to threshold time, the snow flake icon will flash.

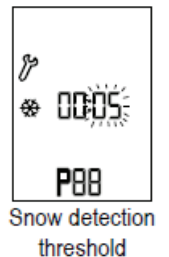


#### P09 - Number of snow sensors connected

- Press the [SELECT] and [+] buttons simultaneously.
- "P09" and the number of snow sensors connected will appear on display.
- Use the [+] and [-] buttons to select 1, 2, 3 or 4 snow sensors. Default: 1

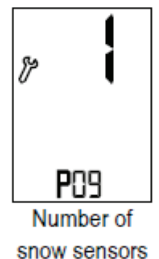

#### P10 - Test conditions mode / Technician commissioning mode

- Turn ON test conditions to check the functionality of the system regardless of sensors parameters (i.e. during the summer).
- In test conditions, the Ambient temperature is always -5°C/23°F.
- **Note:** In order to trigger the system and activate the heaters, use some water to wet the circuit on top of the snow sensor.
- Press the [SELECT] and [+] buttons simultaneously.
- "P10" will appear on display. The hours will blink.
- Use the [+] button to enter test/commissioning mode - "Test" will appear on display.
- Use the [+] button to manually exit test/commissioning mode - "Test" will disappear from display.

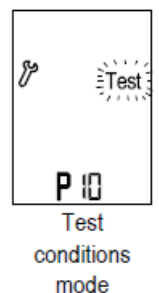

**Note:** If the technician did not manually exit test/commissioning mode, the unit will automatically return to normal mode after 5 hours.

In order to save changes and return to normal display, move DIP switch S1 back to OFF position.


### TECHNICIAN SETTINGS (CONT')

#### Restore default values

- Move DIP switch S1 to ON position.
- Press and hold the [ON] button for 10 seconds. The thermostat will beep.
- Move DIP switch S1 back to OFF position.

#### Enable/Disable zones

- Turn the unit OFF.
- While OFF, Press both the [+] and [-] buttons simultaneously for 10 seconds.
- Press the [Select] button to select zone. Selected zone will flash.
- Press the [+] and [-] buttons enable/disable the selected zone.
- Black icon and "ON" on LCD - Enabled zone.
- White icon and "OFF" on LCD - Disable zone.
- Press and hold the [+] and [-] buttons simultaneously for 5 seconds to exit.

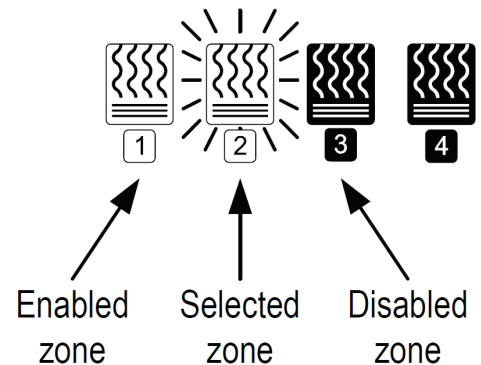

**Note:** Disabled zones will be ignored in splitting time calculations:

Example: the splitting time is set to 60 minutes and heaters are set work in sequence.

3 Heaters enabled and 1 heater disabled.

With all heaters enabled: Each heater will be ON for 15 minutes ( $60/4=15$ ).

With 3 heaters enabled and 1 heater disabled: Each heater will be ON for 20 minutes ( $60/3=20$ ).



#### DIP switch S2 - Short measuring times (test only)

Use DIP switch S2 to short the measuring times as follows:

- "ON" - Short measuring times – for test/commissioning only (measuring times will be divided to 60).
- "OFF" - Normal operation.

Short measuring times:

A real 1 hour will take 1 minute and a real 1 minute will take 1 second.

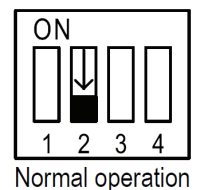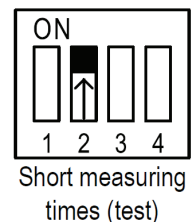



### TECHNICIAN SETTINGS (CONT')

DIP switches S3 and S4 – heaters sequencing logic

Use DIP switches S3 and S4 to define the sequencing logic of the heater (zones) as follows:



S3 OFF, S4 OFF



All 4 outputs work per request from the snow sensor(s)



S3 OFF, S4 ON

Outputs 1+3 and outputs 2+4 work together (according to splitting time)



**Note:** Do not use this configuration with more than two snow sensors connected.

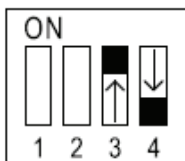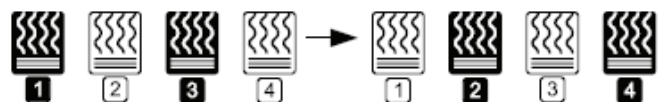

S3 ON, S4 OFF

Outputs 1, 2 and 3 work in sequence (according to splitting time) and output 4 works continuously.


**Note:** Do not use this configuration with more than two snow sensors connected.

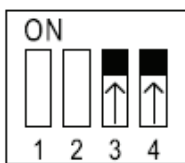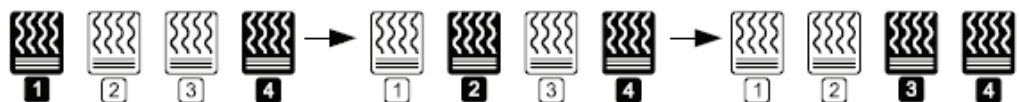

S3 ON, S4 ON

All 4 outputs work in sequence (according to splitting time)

**Note:** Do not use this configuration with more than two snow sensors connected.

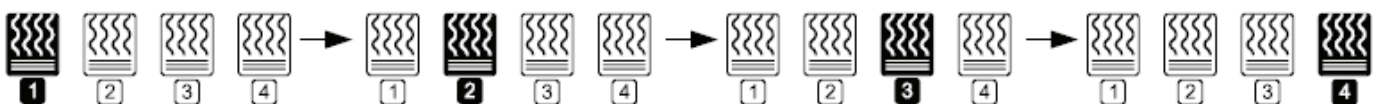


#### NOTES:

1. The illustrations above show the heaters operation for the COMMBOX-600. The logic remains the same for RESIBOX-120, without heater 4.
2. Heater 5 for all models, will be activated with or without heater 4, depending on the "Heaters output logic" parameter set in section P07.
3. The logic will ignore disabled zones.

### TEMPERATURE READING ERRORS

Ambient temperature sensor readings (on snow sensor) are out of reliable measuring range.

Ambient temperature < -9°F/-23°C  
Ambient temperature > 54°F/12°C

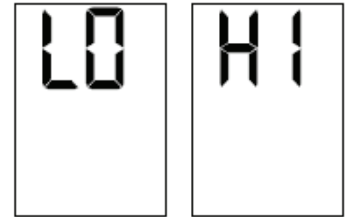


The system will continue to operate using constant predefined values. In addition, the display will alternate between "LO" and -11°F/-24°C for low temperature readings, and between "HI" and 55°F/13°C for high temperature readings.

#### Error 1 – Communication error with one (or more) snow sensors

"SensErr 1" Will appear on display.

If the system is configured to work with more than 1 snow sensor, the faulty snow sensor number will appear on display: P01, P02, P03 or P04.

The system will use readings from snow sensor 1 instead of the missing readings from the faulty snow sensor.

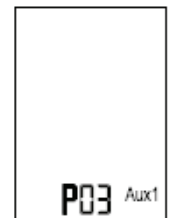

Communication error with snow sensors


#### Error 2 – Upper limit temperature sensor is not connected or short circuit

"SensErr 2" Will appear on display.

The system will continue to operate regardless of the upper limit temperature.

Required actions:

1. Refer to P03 section of the technician settings.
2. Check the temperature value and disable the sensor if needed.
3. Replace the sensor.

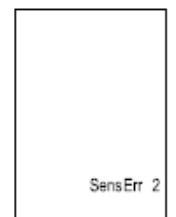


Upper limit temperature Sensor error

### APPENDIX 1

#### Calibrating and testing the internal GFCI

The GFCI (ground fault circuit interrupter) is designed to provide protection for electrical equipment.

The "ON" Time Delay and Current Trip should be configured to match application requirements.

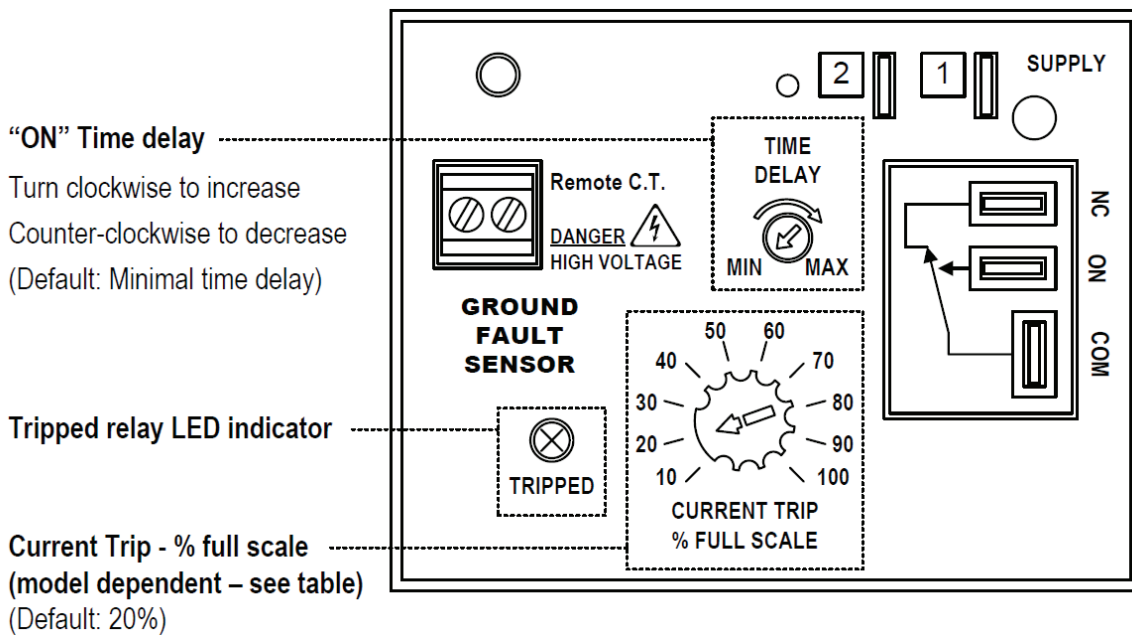

Indicator	Current trip (Amps)	
	COMMBOX-600	RESIBOX-120
10	0.1	1.0
20	0.2	0.02
30	0.3	0.03
40	0.4	0.04
50	0.5	0.05
60	0.6	0.06
70	0.7	0.07
80	0.8	0.08
90	0.9	0.09
100	1.0	0.10

#### GFCI TEST

The GFCI should be tested monthly. Press the red GFCI TEST button located next to the R,C terminals inside the box for 3 seconds to trip the outlet and break the circuit. The RED internal LED on the GFCI and the RED external lamp on the box door should lit. Press the RESET GFCI button on the box door for 5 seconds to return to normal operation and reestablish power and protection.

### UPPER LIMIT TEMPERATURE SENSOR

#### Description

The Upper Limit Temperature sensor is installed under the surface and measure the ground temperature. The temperature value sensed by the sensor if used by the Snow Melting controller in its algorithm for energy saving operation of the snow melting system.

The Sensor is connected to the Snow Melting Controller with a 30 feet (10 m.), 2 wires cable coated in a semi rigid polymeric material. The Semi rigid flexible cable enable the technician and installer to push the sensor into a long conduit without getting bended.

The temperature value of the sensor can be observed by the technician (in the Technician mode parameters of the controller) and the location of the sensor can be adjusted, based on the real-time reading.

In case of damage in the sensor (due to external force such as digging or drilling in the ground, damaging the cable), a warning notice on the controller LCD will indicate that the sensor is damaged and can be replaced.



\*\* Included with Resibox-120/Commbox-600 purchase.

\*\*\* Does not replace ground level sensors such as SIT-6E or similar.

#### Features and Benefits

- Isolated NTC temperature thermistor
- 10KΩ @ 25°C
- 30 feet cable
- 24VAC
- Rated Voltage – 300V
- Semi rigid – enables to be pushed into conduit
- Cable outer jacket color - Black
- Simple user interface for parameters set from the controller
- Technician testing / commissioning mode.
- Enables reading actual value

Cable length	33 ft. (10 m) two conductor cable
Installation	Underground inside a conduit
Material	Sensor – NTC thermistor Cable jacket – TPE
Resistance	10KΩ @ 25°C
Operating temp.	-40°F to 68°F (-40°C to 20°C)
Storage temp.	-50°F to 220°F (-40°C to 105°C)

### ELECTRIC DIAGRAM – CONNECTION TO THE BOX SYSTEM

